



## Network Camera IT110


---

### Quick Installation Guide


This guide describes the basic functions of IT110. All detailed information is described in the user's manual.

**1 Check package contents**


● IT110

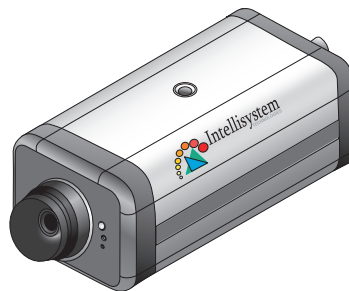

● Power adapter

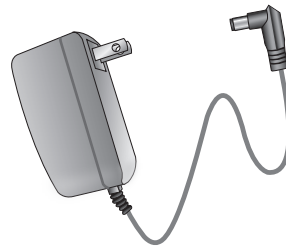

● Camera stand

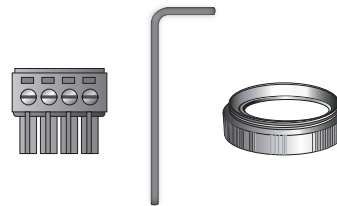● I/O connector (attached),  
wrench and CS ring


● Software CD




● Warranty card

## 2 Physical description

### ● Front panel

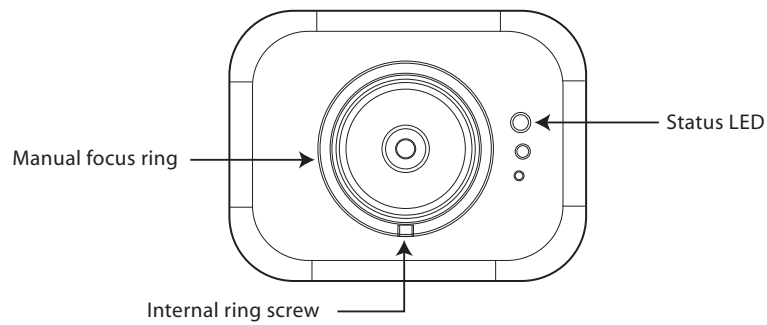


### ● Back panel

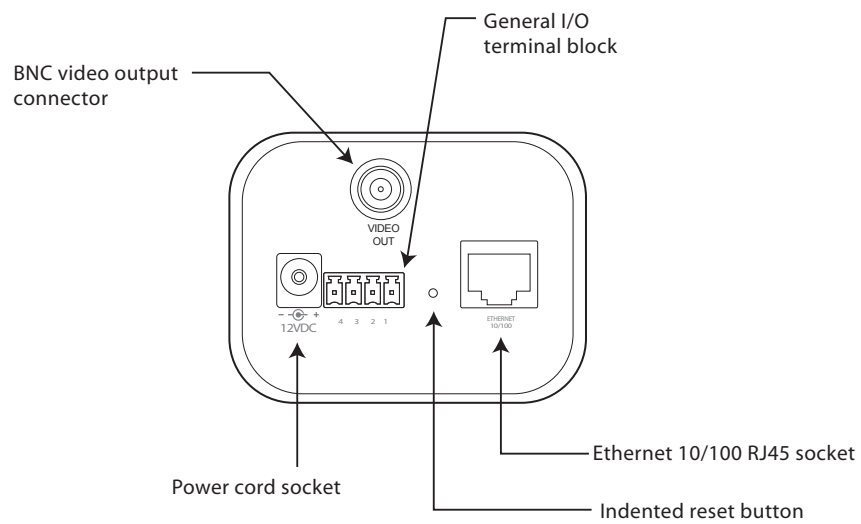

### 3 Make connections

- Install your Network Camera in Ethernet network

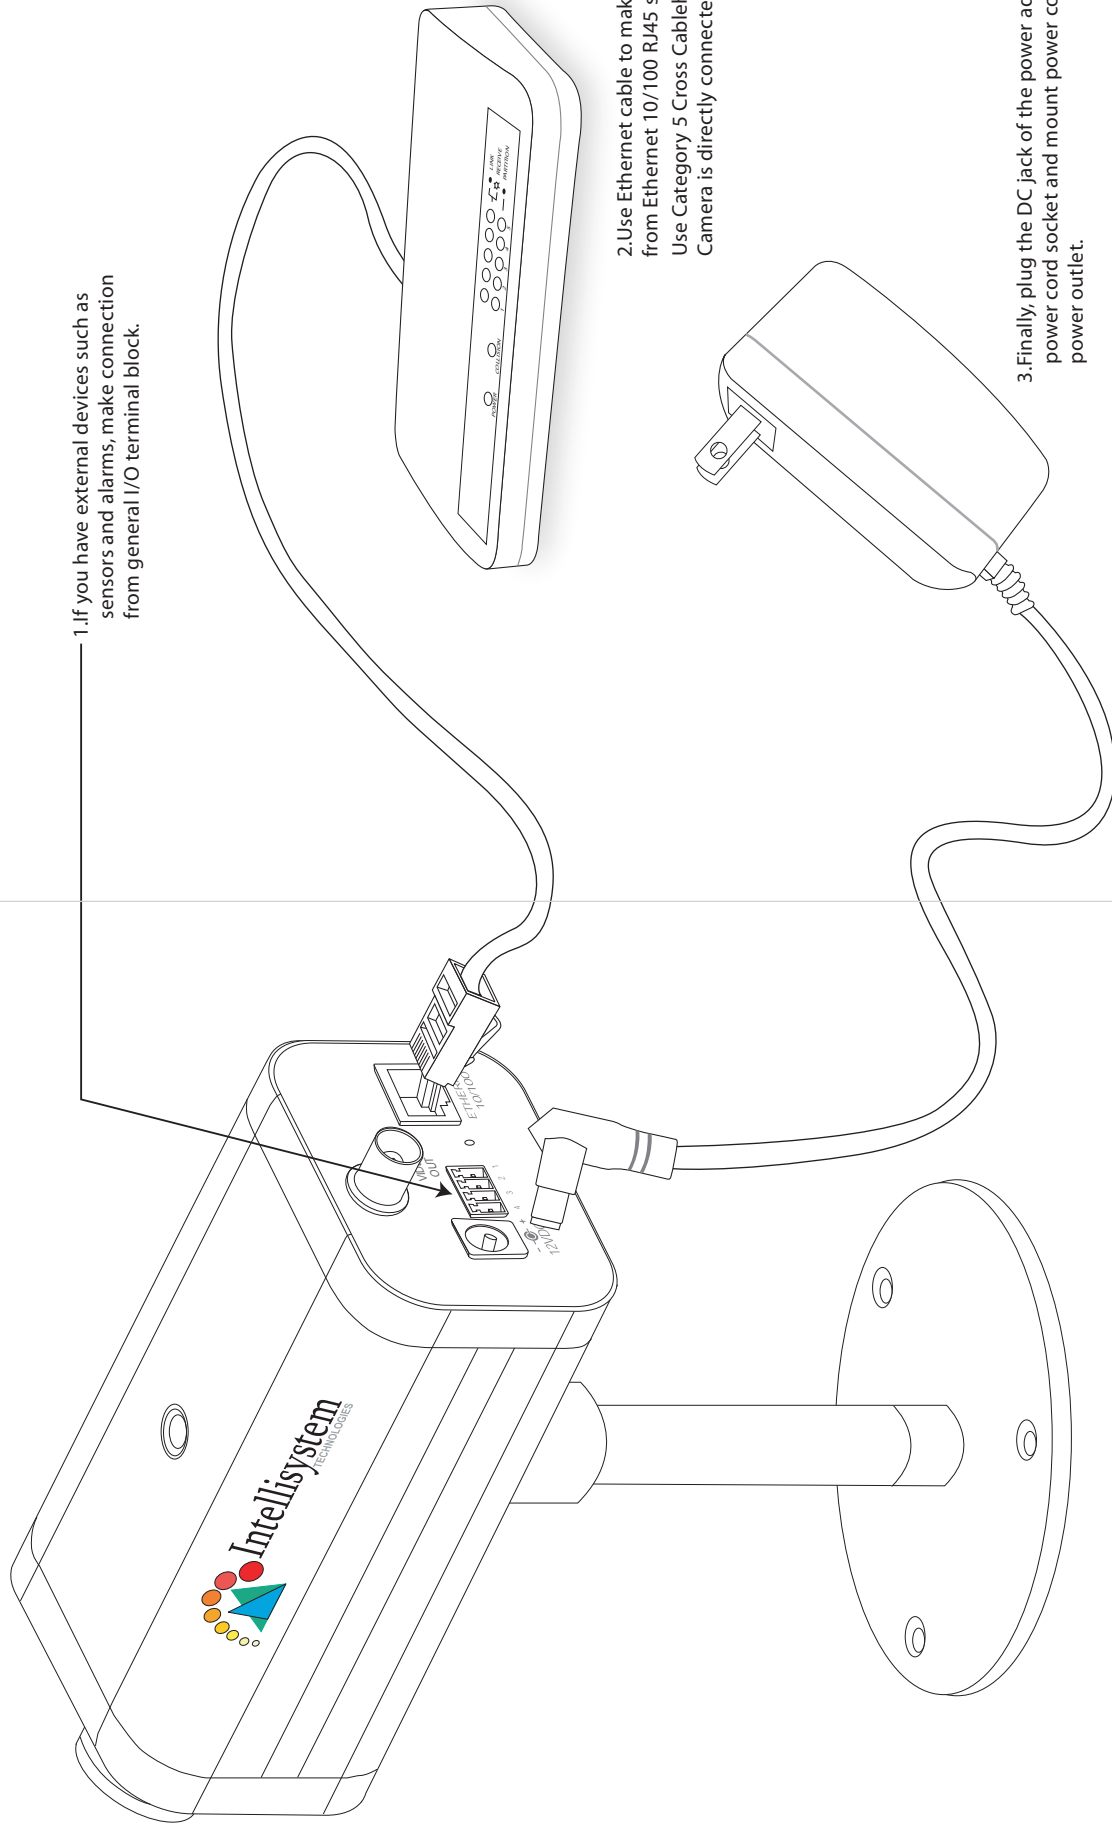


1. If you have external devices such as sensors and alarms, make connection from general I/O terminal block.

2. Use Ethernet cable to make connection from Ethernet 10/100 RJ45 socket. Use Category 5 Cross Cablehen Network Camera is directly connected to PC.

3. Finally, plug the DC jack of the power adapter into power cord socket and mount power cord to a power outlet.

## 4 Assign IP address

- A** Note the serial number from the label on the unit.

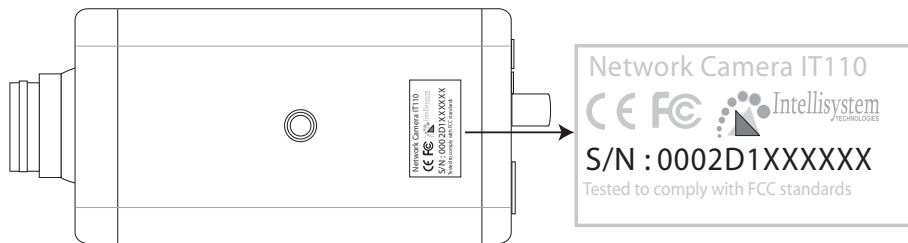

This serial number is the same as Ethernet address,  
 for example: 0002D1000012=00-02-D1-00-00-12

- B** Assign IP address


- Using Installer program

1.Run the Installer.exe first, and power on Network Camera

2.Click on serial number that matches the one you just note

3.Assign a free IP address

4.If you want to fix the IP address of the unit, check the option "Use this IP whenever system boots"

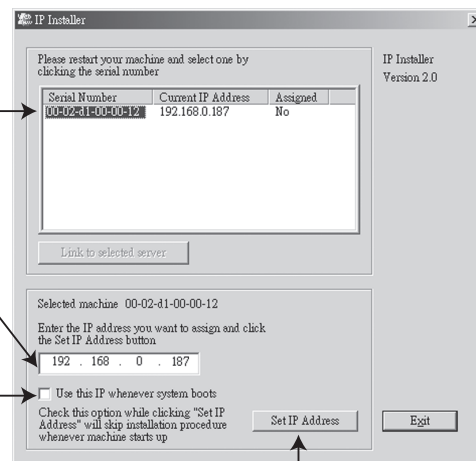

5.Click "Set IP Address" to start installation process


### ● Using DOS command in Windows

Start a DOS window and type the following command

**Syntax :**

arp -s <Server IP address> <Ethernet address>

ping <Server IP address>

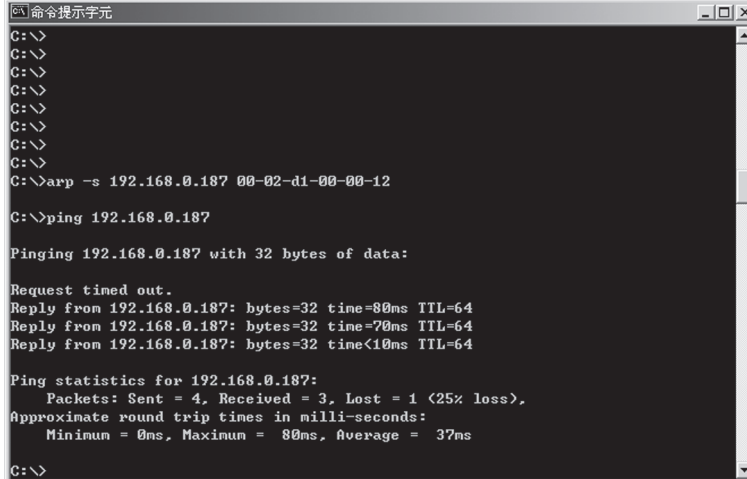**Example :**

```
C:\>
C:\>
C:\>
C:\>
C:\>
C:\>
C:\>
C:\>
C:\>arp -s 192.168.0.187 00-02-d1-00-00-12
C:\>ping 192.168.0.187

Pinging 192.168.0.187 with 32 bytes of data:

Request timed out.
Reply from 192.168.0.187: bytes=32 time=80ms TTL=64
Reply from 192.168.0.187: bytes=32 time=70ms TTL=64
Reply from 192.168.0.187: bytes=32 time<10ms TTL=64

Ping statistics for 192.168.0.187:
    Packets: Sent = 4, Received = 3, Lost = 1 (25% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 80ms, Average = 37ms

C:\>
```

1.Type arp command and press enter


2.Type ping command and press enter

3.If you see the reply message, the unit has been installed successfully


## 5 Start the Internet Explorer to verify your installation

1. Type the IP address and press enter

At the initial access to the "Connection Type" page, the web browser will ask for a new plug-in installation, the plug in being Network Camera. This plug-in has been registered for certification and can be used to change the parameters at the client's site. The user may click on to install the plug-in. If the web browser does not allow the user to complete the installation, check the Internet security in order to set on your web browser to "Ask confirmation for download ActiveX control without electronic Signature" and so refresh the current web page. If the problem persist please contact your IT or networking supervisor.

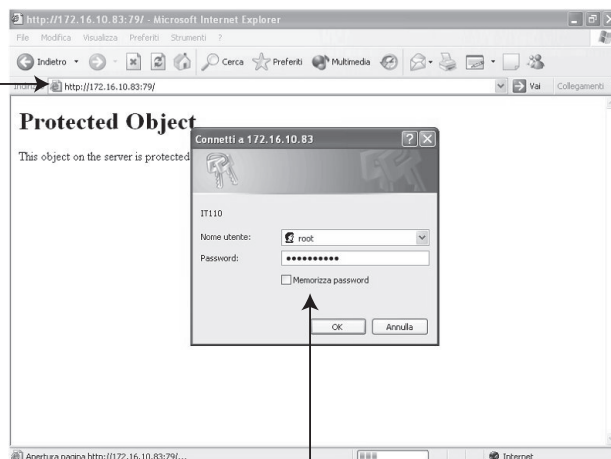

2. Type "root" as user name and the serial number as password, then press enter or click ok

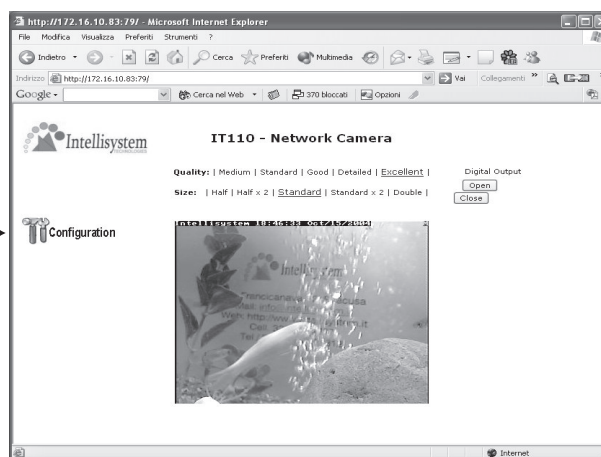

3. Click the configuration for further installation

For detailed information on further configuration, see user's manual on the CD.